

EasyLight 2 Solar System



NR-VT-LS02
03/2008

free energy europe

Due to ongoing improvement policy, this documentation is subject to modification without prior notice.

EasyLight 2 Solar System

POWER

USE

Solar panel

Light



Install in 1 step and switch on your Light !

1 Plug Solar panel cable into Light.



EasyLight 2 Solar System

SYSTEM COMPONENTS

NR-VT-LS02

1x free energy europe Solar Panel FEE-5-6, 4 Watt peak, 6 Volt

Dimensions 343 mm (L) x 317 mm (W) x 12.5 mm (H), 1.5 kg

Installation four holes for easy installation

Wiring 5 meter double insulated cable (2x 0.75 mm²) with double socket jack attached

Guarantee 10 years product guarantee

2x Soltys Elixo LED Light LM-ST-01, 0.5 Watt, 6 Volt

Dimensions 96 mm (D) x 72 mm (H), 210 gr

 
Installation easy fix to wall or ceiling with cord

Lights 10x bright LED's

Beams wide beam, narrow beam

Modes high intensity (10 hrs use), medium intensity (40 hrs use), flash mode

Batteries 3 batteries: rechargeable, type AA (LR6) Ni-MH 1.2V

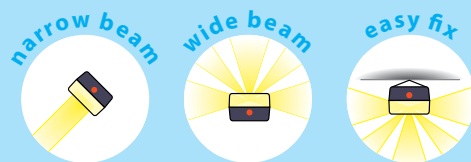

You can do more on a day with **free energy europe** solar panels !

Solar panel

Number of Lights that can be powered * with specific panel:

* Based on 5 hours full sun equivalent (5 kWh/m²) per day


EasyLight 2
NR-VT-LS02



5 Watt



 
EasyLight 4
NR-VT-LS03



7 Watt



 EasyLight 8
NR-VT-LS04



14 Watt



free energy europe

Address: Parc de la Croisette • 2, Rue Léon Droux, B.P. 66 • 62302 Lens Cedex • France

Email: info@freeenergyeurope.com • Website: www.freeenergyeurope.com

Telephone: +33 (0)3 21 79 30 60 • Fax: +33 (0)3 21 43 65 88